



FITTING INSTRUCTIONS – Installing Newel Post Caps

1

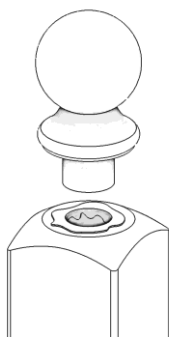


For newels which have a pre-drilled hole on top face to accept a newel cap with a spigot, simply apply pva adhesive around the inside of the newel post hole and around the top face. Insert newel cap into hole until the shoulder of the newel cap is fully down against top of newel post. Twist slightly to improve glue coverage

2

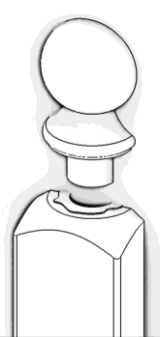


For half newels which have a pre-drilled hole on top face to accept a newel cap half with a spigot, simply apply pva adhesive around the inside of the newel post hole and around the top face. Apply some fast grab adhesive to the back face of the half cap. Insert newel cap into hole until the shoulder of the newel cap is fully down against top of newel post and back of newel cap is pressed against the wall

3

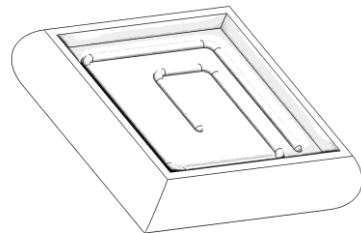


For square newel tops with no pre-drilled hole, you can use either a flat cap or pyramid cap. Apply a bead of pva glue in the cap rebate

4

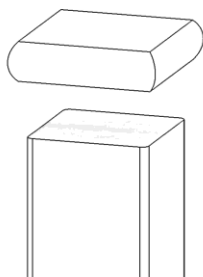


Ensure the top of the newel post is clean and free of debris. Offer cap onto top of newel post and press down to spread the adhesive around

5

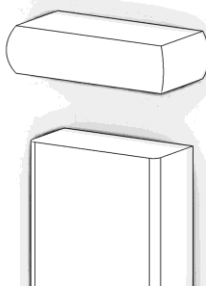

For half newels, ensure the top of the newel post is clean and free of debris. Apply a bead of fast grab adhesive to back face of the half cap. Offer cap onto top of newel post and press down to spread the adhesive around and the back face of the half cap is fully against the wall

6

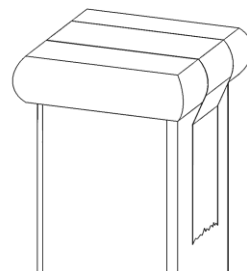

Apply a strip of masking tape over the flat cap/pyramid while the adhesive sets.